



# CG-Lock - 2 Minute Installation Sequence


See the "How To Install" video at <http://videos.hspn.com/?videoid=40>

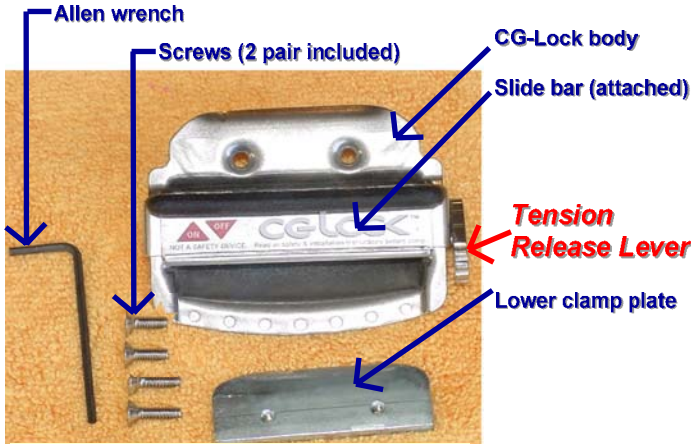


1. The supplied parts

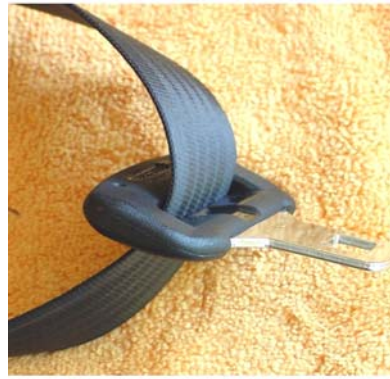


2. A typical single pass tongue

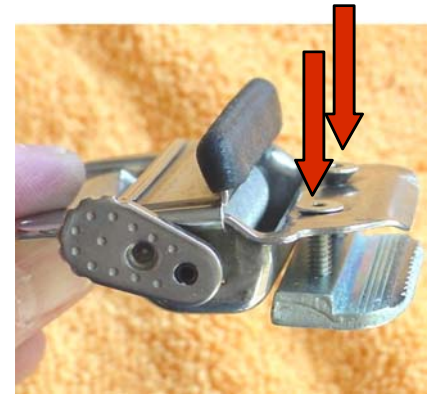

3. Attach the screws to the lower clamp plate

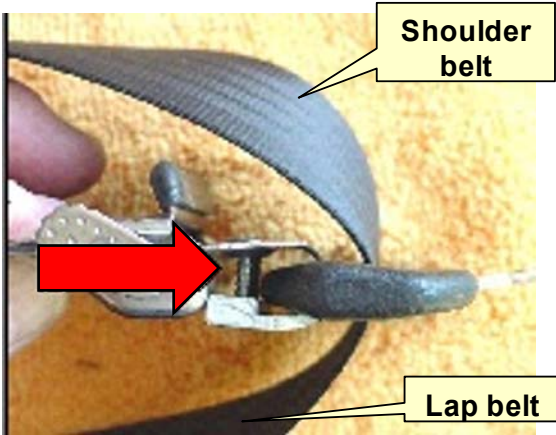


4. Slide the CG-Lock over the tongue

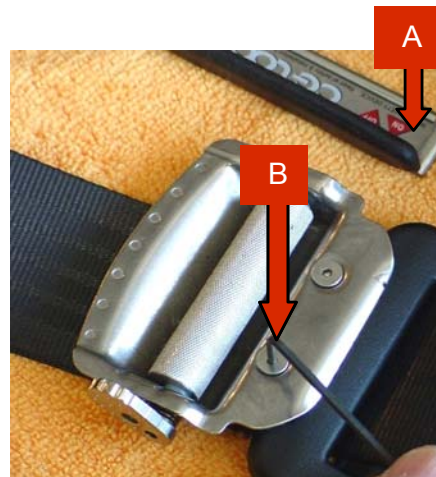

5. Remove the capture bar (A) and tighten the screws using the supplied wrench (B)



6. Lay the shoulder belt over the cam

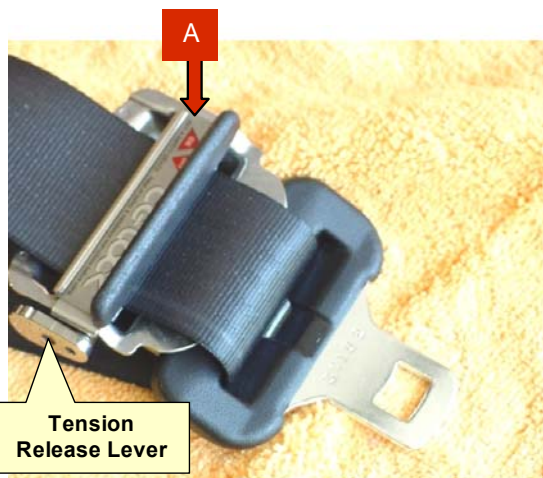

7. Slide the capture bar over the shoulder belt, depress the lever and slide the bar fully forward



8. Buckle up as usual, then simply pull the slack out of the lap belt by pulling the shoulder belt as shown by the red arrow. If you need more slack to buckle up, depress the lever to let the seatbelt slide through the CG-Lock.

See the Instruction Brochure for complete assembly details and warnings